



Secure Payment Flow Mode

Secure Payment Flow mode empowers you to confidently entrust customer-facing Clover devices with your patrons, ensuring they remain securely within the payment screen.

This device level setting serves as a safeguard, preventing customers from accidentally or intentionally exiting payment flow to:

- Manually enter card details
- Initiate voids or refunds
- Access restricted merchant functions

Activate Secure Payment Flow

1. On your Clover device screen, select **Setup**.
2. From the left menu, choose **Payments**
3. Check the option **Enable Secure Payment Flow Mode**.

Tip: Enhance security by disabling manual card entry on your device. This helps prevent both accidental and intentional card entries. To do so, just uncheck the box.

➔ For more information, please contact Customer Support at **1-888-263-1938**.